



		使	用圖示簡易說明		
	回主畫面	()	仰角設定(1~28)	Ð	時間設定(1~90分)
1	單球測試		左右設定(1~9)	00	球數設定(1~999)
	開始出球	\mathbf{Q}	旋轉設定(1~59)		螢幕省電設定(30~999) 999: 關掉省電功能
	停止出球		強度/球速設定(1~99)	Game	比賽模式暫停時 間設定(0~8秒)
⊿ ₫[] 2/2	級數選擇	(]00	出球頻率設定(1~40) (約 30~90 球/分)	1Min	每分鐘間隔暫停時 間設定(0~8秒)













		ΈΗ	JOU	Sma	rt Pi	ingP	ong	Syst	tem	AUTO Mode	
(alo	A01	A10	A19	A28	A37	A46	A55	A64	A73	20	
	A02	A11	A20	A29	A38	A47	A56	A65	A74		
	A03	A12	A21	A30	A39	A48	A57	A66	A75	-	
	A04	A13	A22	A31	A40	A49	A58	A67	A76		
	A05	A14	A23	A32	A41	A50	A59	A68	A77	E	
	A06	A15	A24	A33	A42	A51	A60	A69	A78		+15
	A07	A16	A25	A34	A43	A52	A61	A70	A79		0
1)	A08	A17	A26	A35	A44	A53	A62	A71	A80		-15
	A09	A18	A27	A36	A45	A54	A63	A72	A81		
HANNE STATE										P	00

	Ę T	EH	JOU	Sr		自		AUTO Mode	?		
N TAN		×			.內建 72	組(A0)					
	A01 A10 A19 A				.A73~A8	31 為不		20			
	A02	A11	A20	A	.可根據需	雺 求微誹	間出球頻	i率(-15-	~15)		
	開始	A12	A21	A	.可先選擇	፪組別,₮	再輕觸"	AUTO			
	A04	A13	A22	A	Mode"圖案,即可顯示該組球路 頻率微調						
	停止	A14	A23	A	.輕觸時鐘	圖案,	可選擇政	求數			
	A06	A15	A24	A33	3 A42	A51	A60	A69	時間		-15
	單一	A16	A25	A34	4 A43	A52		470			0
1)	出球	A17	A26	A35	5 A44	A53	時間/	′球數(輕	觸)		-15
	A09	A18	A27	A36	6 A45	A54	A63	A72	A81		201
1/4										12	00

	J	ΈΗ	JOU	Sma	rt Pin	gPon	g Sy	ystem	AUTO Mode	((:-
(Alo	A01	A10	A19				A	64 A73	10	
	A02	A11	A20	6				65 A74		
	A03	A12	A21	1	2	3		A75	30	
	A04	A13	A22					時間可透過」	=下鍵、	
	A05	A14	A23	4	5	6		滑軌或數字	鍵盤(輕	
	A06	A15	A24	7	8	9		胸寅性内數	子)設定	+15
	A07	A16	A25				A	70 A79		0
(1)	A08	A17	A26	0	DEL	ОК	Α	71 A80		-15
	A09	A18	A27	A36	A45 /	A54 A6	3 A	72 A81		
2/4									9	[]00

	T	ΈH	JOU	Sma	rt Pi	ingP	ong	Syst	tem	AUTO Mode
1 de	A01	A10	A19	A28	A37	A46	A55	A64	A73	/ 🗗
	A02	A11	A20	A29	A38	A47	456	465	A74	
	A03	A01	(球號	: 仰角,2	左右,旋珠	求,球速,サ	頁率)	A66	A75	輕觸此圖案,
	A04	(1: 8,	,3,31,2	0,10)					A76	即可顯示球路
	A05								A77	E
	A06								A78	+15
	A07								A79	
1	A08	A17	A26	A35	A44	A53	A62	A71	A80	-15
	A09	A18	A27	A36	A45	A54	A63	A72	A81	
3/4	ARR .		and the second							00

2	Т	ΈH	JOU	Sma	rt Pi	ingP	ong	Syst	em	1 彈跳上旋
	A01	A10	A19	A28	A37	A46	A55	A64	A73	20
	A02	A11	A20	A29	A38	A47	A56	A65	A74	
	A03	A12	A21	A30	A39	A48	A57	A66	A75	⊥彈跳下旋
2 彈跳下	A04	A13	A22	A31	A40	A49	A58	A67	A76	
旋、側旋、 側下旋	A05	A14	A23	A32	A41	A50	A59	A68	A77	上、下旋
	A06	A15	A24	A33	A42	A51	A60	A69	A78	組合球路
	A07	A16	1.20	A34	A43	A52	A61	A70	A79	
2 彈跳組合	A08	A17	A26	A35	A44	A53	A62	A71	A8 L	1 -15
球路	A09	A18	A27	A36	A45	A54	A63	A72	A81	不定點出球
4/4						2000				Henris Contacting in control

in a	TEH-JOU Smart PingPong System													
de	A01	A10	A19	A28	A37	A46	A55	A64	A73	כ				
	A02	Λ11	A20	Δ29	A38	A47	456	465	A.74					
	A03	A71	(球號	: 仰角,?	左右,旋斑	求,球速,サ	頃率)	A66	A75	輕觸此圖案,				
	A04	(1: 8) (2: 2)	.3,31,2 0.3.1.4	0,10) 0.10)	(6 A4)	: 20,3,: : 20.3.	1,40,10 1.40.10) A67	A76	即可顯示球路				
	A05	(3: 2	0,7,1,4	0,10)	A4 (8	: 20,3,	1,40,10) 468	A77					
	A06	(4: 2	0,4,1,4	0,10)	A4.(9	: 20,5,	1,40,10) 469	A78					
	A07	(5: 2	0,6,1,4	0,10)				A.70	A79					
(1)	A08	A17	A26	A35	A44	A53	A62	A71	A80	-15				
	A09	A18	A27	A36	A45	A54	A63	A72	A81					
4/4										·> Poo				

i v	T	EH-J	OU 9	Sma	rt Pi	ngPo	ong	Syst	em	MEM Mode	
(A)	M11	M21	M31	M41	M51	M61	M71	M81	M91	10	
	M12	M22	M32	M42	M52	M62	M72	M82	M92		
	M13	M23	M33	M43	M53	M63	M73	M83	M93	_	
	M14	M24	M34	M44	M54	M64	M74	M84	M94		
	M15	M25	M35	M45	M55	M65	M75	M85	M95		
	M16	M26	M36	M46	M56	M66	M76	M86	M96		+15
	M17	M27	M37	M47	M57	M67	M77	M87	M97		0
(1)	M18	M28	M38	M48	M58	M68	M78	M88	M98		-15
	M19	M29	M39	M49	M59	M69	M79	M89	M99	A	
										2	00

首頁 TEH-JOU Sr 記憶循環模式 .可記憶 81 組(M11~M99)自建球路	((:-
M11 M21 M31 1 .可在"球路記憶設定"頁面設定球	
M12 M22 M32 M32 M32 M32 M32 M32 M32 M32 M3	
■ M23 M33 M33 M39 為不定點球路組合,當在比賽 90	
M14 M24 M34 1 模式選第 5 選項時,會先出 M99 球	
停止 M25 M35 M35 M35 可相據需求微調出球頻率(a15 a 15)	
M16 M26 M36 D 可先選擇相別 再輕觸" MFM	15
	0
出球 M28 M38 M48 M58 M68 M78 M88 M98 1	15
M19 M29 M39 M49 M59 M69 M79 M89 時間	00

	T	EH-J	ου	Sma	rt Pin	gPon	g	System	MEM Mode	(îr
(alo	M11	M21	M3	^_^			1	M81 M91	10	
	M12	M22	МЗ	16			2	182 M92		
	M13	M23	МЗ	1	2	3			90	
	M14	M24	МЗ				K	時間可透	過上下鍵、	
	M15	M25	МЗ	4	5	6	5	/ 写 11 9 3 8 1 5 4 5 4 5 4 5 4 5 4 5 4 5 4 5 4 5 4 5	子鍵盛(輕動空)铅定	
	M16	M26	МЗ	7	8	9	6		数于版定	+15
	M17	M27	МЗ				7	M87 M97		0
(1)	M18	M28	МЗ	0	DEL	ОК	8	M88 M98		-15
	M19	M29	M39	M49	M59	M69 M	79	M89 M99		
2/3									9	00

A a	Т	EH-J	00 9	Sma	rt Pi	ngPo	ong	Syst	em	MEM Mode
(AC	M11	M21	M31	M41	M51	M61	M71	M81	M91	10
	M12	M22	M32	M42	M52	M62	M72	M82	M92	
	M13	M1	1 (球號	虎: 仰角,	左右,旋3	球,球速,	頻率)	1483	M93	先選擇組別,輕
	M14	(1:8	,3,31,2	20,10)	(6)	: 20,3,1 · 20 3 ·	1,40,10 1 40 10) (4134	M94	觸此圖案,即可
	M15	(3: 2	0,7,1,4	40,10)	(8)	: 20,3,1	1,40,10		M95	顯示該組球路
	M16	(4: 2	0,4,1,4	40,10)	(9	: 20,5,2	1,40,10) 1486	M96	
	M17	(5: 2	0,6,1,4	40,10)				M87	M97	
1	M18	M28	M38	M48	M58	M68	M78	M88	M98	-15
3/3	M19	M29	M39	M49	M59	M69	M79	<mark>M89</mark>	<mark>M99</mark>	





















